



# **INLINE 5 Software**

# **INSTALL BULLETIN**

Page 2: Installing INLINE 5

Page 6: Removing INLINE 5

---

**NOTE:** PLEASE DO NOT ATTEMPT TO INSTALL THE SOFTWARE BEFORE READING THIS DOCUMENT.

IMPROPER INSTALLATION OR USE CAN RESULT IN ERRONEOUS DATA AND MALFUNCTIONING EQUIPMENT.

**Please contact your local Cummins distributor if you need additional assistance in installing INLINE 5**

---

# Installing INLINE 5

INLINE 5 runs on the following Windows® operating systems:

- Windows XP® and Windows XP®x64
- Windows 2000® Service Pack 4
- Windows Vista® and Windows Vista® 64-bit
- Windows 7®

## **If using a previous version of The INLNE 5 Software:**

- It is not necessary to uninstall previous versions of the INLINE 5 software before installing the new version. The new version will automatically upgrade the currently installed version.

**Note: The INLINE 5 Software must be installed prior to connecting the adapter to the PC.**

## **Before beginning:**

- Close any programs being used.
- Ensure the adapter is not connected to the PC.

---

## **1** To begin:

1. Insert the INLINE 5 Software CD into the CD-ROM drive.
2. The installation process should start up automatically.

**Note:** It might take 30-60 seconds for the Installation menu to appear, depending on the processor and speed of the PC.


If the Installation menu does *not* appear automatically:

1. Click , then **R**un....
2. In the **Open:** box, type *D:\CD-Start.exe*. (If your CD-ROM uses a drive other than D, substitute the correct drive letter.)
3. Click  to open the menu, then choose “Inline 5.6.3.1 Setup - 32 Bit.exe” if the PC has a 32-bit Operating System and “Inline 5.6.3.1 Setup - 64 Bit.exe” if the PC has a 64-bit Operating System


**Note:** If installing the INLINE 5 Software from the [inline.cummins.com](http://inline.cummins.com) website, select “Inline 5.6.3.1 Setup - 32 Bit.exe” if the PC has a 32-bit Operating System and “Inline 5.6.3.1 Setup - 64 Bit.exe” if the PC has a 64-bit Operating System.

---

## **2** The Install Shield Wizard automatically begins preparing the installation. The bar displays the Wizard's progress.

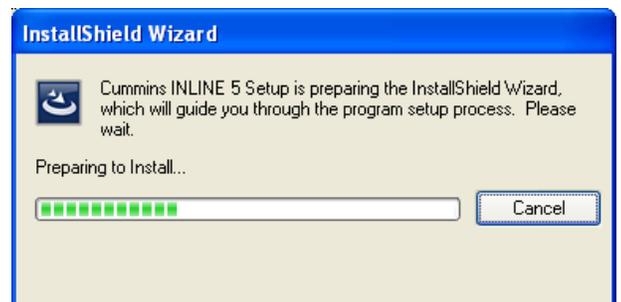



## Installing INLINE 5 (continued)

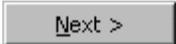
3 In the Welcome screen, click  to continue.


Or, click  to exit Setup and return to Windows.

**Note:** Click  in any of the *INLINE 5 Setup* windows to stop the installation and exit *INLINE 5 Setup*.

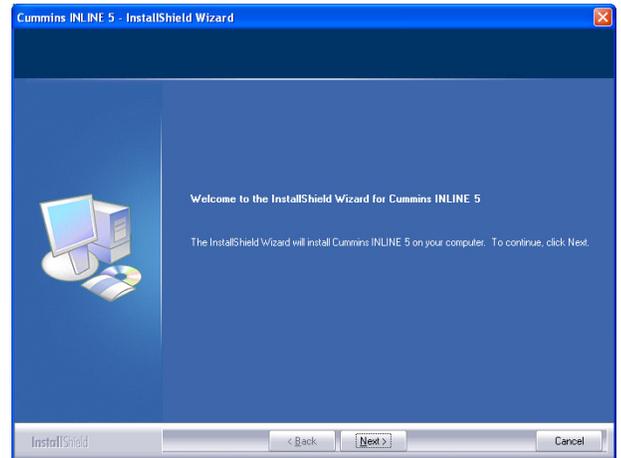


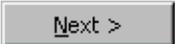4 Click  to begin the installation process.

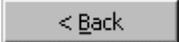**Note:** Click  in any of the *Setup Wizard* windows to return to the previous window.

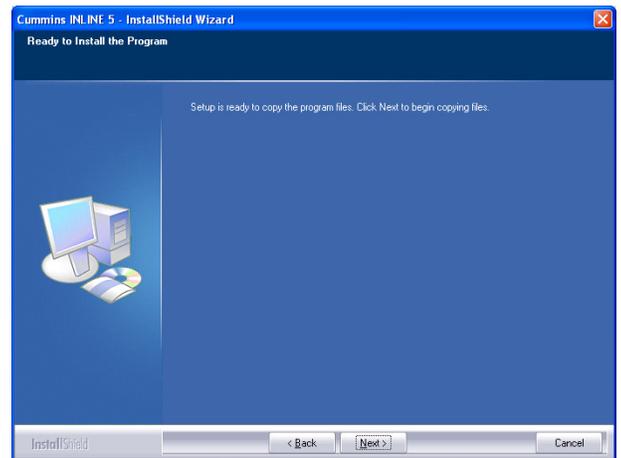

5 The Setup Status bar displays progress as *INLINE 5* files are installed on the hard disk.

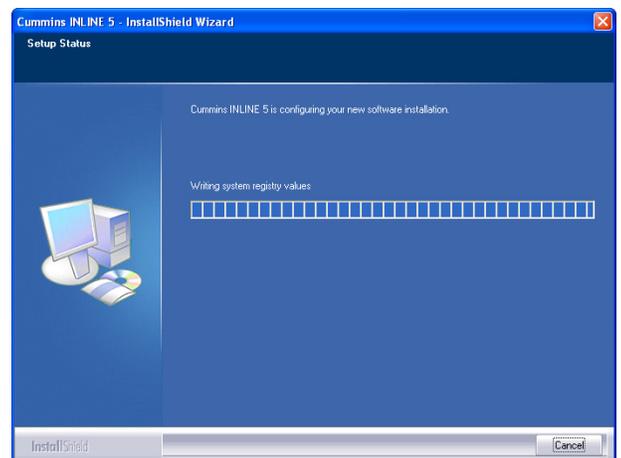

## Installing INLINE 5 (continued)

- 5a** If at anytime the following window appears during the installation, click on **Continue Anyway**.




- 6** The INLINE 5 Software has been successfully installed.

Click  to return to Windows.

The INLINE 5 Adapter firmware can be updated at this point.


**Note: If the INLINE 5 Adapter firmware is 5.45, the update is not necessary.**

Click  if update of the INLINE 5 Adapter firmware is not necessary at this time.

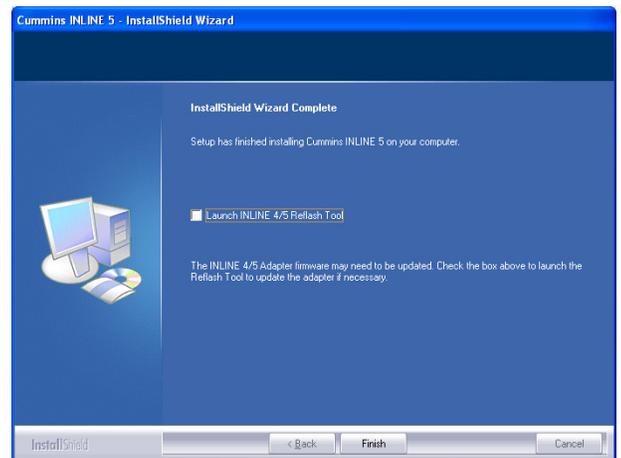

- 6a** To reflash the INLINE 5 Adapter firmware check the box and click .

**Note:** Please refer to the *INLINE 5 Adapter Reflash instructions* in order to update the *INLINE 5 Adapter firmware*.

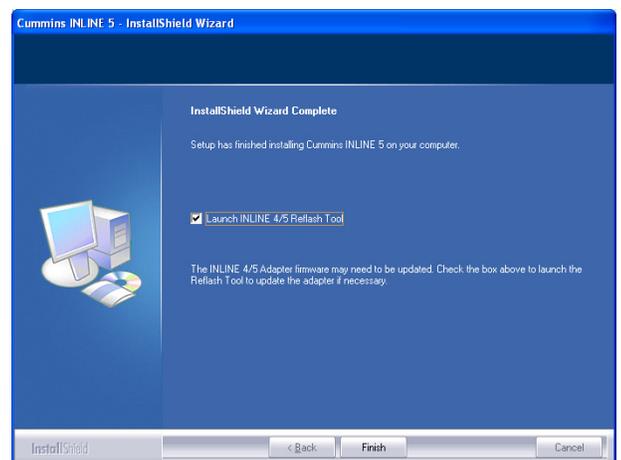

## Installing INLINE 5 (continued)

- 7 Power up the INLINE 5 Adapter. This can be done by connecting the adapter to a Cummins Engine.

The INLINE 5 Adapter USB Driver must be installed if using a USB cable to connect through the USB port on the PC.


When connecting to the INLINE 5 Adapter for the first time using a USB cable, the **Found New Hardware Wizard** window is displayed.

Select Install the software automatically (Recommended) and click .

**Note:** This is not necessary if using a RS-232 Serial cable and connecting through the COM port on the PC.



- 8 The Status bar displays progress as the USB driver is installed.

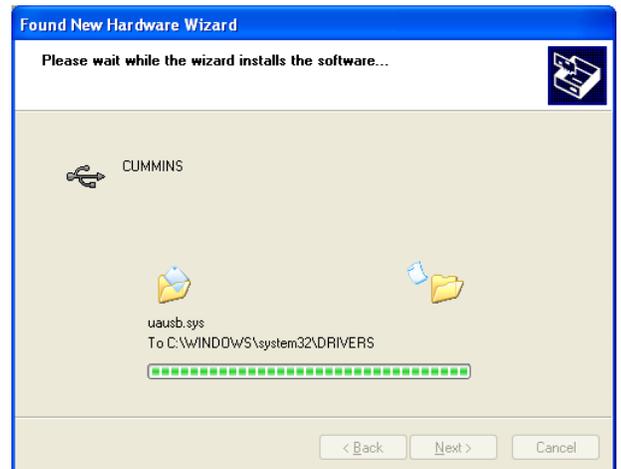

- 9 If at anytime the following window appears during the installation, click on **Continue Anyway**.



---

## Installing INLINE 5 (continued)

---

- 10** The USB driver for the INLINE 5 Adapter has been successfully installed.

The INLINE 5 adapter is now ready for use.

Click  to return to Windows.

**Note:** If there are more than one USB port on the PC, connect the Adapter to the other ports and repeat the procedure from step 7. This will configure other USB ports on the PC.



---

## Removing INLINE 5 Driver

Use these steps to remove INLINE 5 Software from the PC.

- 1** Click , then **Control Panel**.
  - 2** Open the **Add/Remove Programs** icon.
  - 3** Select **Cummins INLINE 5** from the list, and click . Follow any additional prompts, as required.
  - 4** When removal is complete, close all windows to return to the Windows desktop.
-